

HOW TO PROGRAM THE **BE.CODE** KEYPAD ON A CONTROL BOARD WITH AN LCD DISPLAY



NOTES:

- Make sure the 3V battery is properly inserted.
- Maximum 254 codes can be programmed.
- The default password is “123456”.

MENU ON THE KEYPAD

Below the main functions on the keypad.

NUMBER ON THE KEYPAD	COMMAND DESCRIPTION
1	Change the password
2	Insert the Father’s PIN Code
3	Insert the Son’s PIN Code
4	Delete a PIN Code

PROGRAM ON THE KEYPAD A PIN NUMBER TO FULLY OPEN THE GATE (STEP-BY-STEP FUNCTION)

- Press the button “ENTER” to activate the keypad.
- Type in the default password “123456” followed by “ENTER”.
- Press the button “2” to activate the programming function.
- Type in your own Fully Open PIN Number followed by “ENTER”.
- Press the button “2” for ARC (Advanced Rolling Code).
- The keypad emits 2 beeps and exits the programming.

Once the above steps have been completed, you can program the PIN Number into the control board receiver.

- Press the “PG” button on the control board.
- Scroll down until you see “RADIO” and press “PG”.
- You should read “PP”, press “PG” to confirm.
- You now have 10sec to take the keypad and enter the following → “ENTER” Fully Open PIN Number “ENTER”.
- You should read “OK” on the LCD display and you can exit the programming by pressing the “+” and “-“ button simultaneously two or three times.
- You can now operate the gate by entering in the keypad → “ENTER” Fully Open PIN Number “ENTER”.

PROGRAM ON THE KEYPAD A PIN NUMBER TO PARTIALLY OPEN THE GATE (PEDESTRIAN FUNCTION)

- Press the button “ENTER” to activate the keypad.
- Type in the default password “123456” followed by “ENTER”.
- Press the button “2” to activate the programming function.
- Type in your own Pedestrian PIN Number followed by “ENTER”.
- Press the button “2” for ARC (Advanced Rolling Code).
- The keypad emits 2 beeps and exits the programming.

Once the above steps have been completed, you can program the PIN Number into the control board receiver.

- Press the “PG” button on the control board.
- Scroll down until you see “RADIO” and press “PG”.
- Scroll down until you read “PED”, press “PG” to confirm.
- You now have 10sec to take the keypad and enter the following → “ENTER” Pedestrian PIN Number “ENTER”.
- You should read “OK” on the LCD display and you can exit the programming by pressing the “+” and “-“ button simultaneously two or three times.
- You can now operate the gate by entering in the keypad → “ENTER” Pedestrian PIN Number “ENTER”.

PROGRAM ON THE KEYPAD AN EXTRA PIN NUMBER

This procedure is useful if you need to add:

- More than one Fully Open PIN Number.
- More than one Pedestrian PIN Number.

- Press the button “ENTER” to activate the keypad.
- Type in the default password “123456” followed by “ENTER”.
- Press the button “3” to activate the programming function.
- Type in either the Fully Open PIN Number or the Pedestrian PIN Number previously programmed (depending on what you want to add) followed by “ENTER”. The keypad emits 3 beeps.
- Type in the extra PIN Number that you want to add, followed by “ENTER”.

DELETE A PIN NUMBER

If the PIN Number to be deleted is a Father’s PIN Number (the main PIN), all the associated Son’s PIN Numbers (the extra PIN added, if any) will also be deleted.

- Press the button “ENTER” to activate the keypad.
- Type in the default password “123456” followed by “ENTER”.
- Press the button “4” to activate the programming function.

- Type in the PIN Number that you want to erase, followed by “ENTER”.
- The keypad emits 3 beeps and exits from the programming.

CHANGE THE DEFAULT “123456” PASSWORD

- Press the button “ENTER” to activate the keypad.
- Type in the default password “123456” followed by “ENTER”.
- Press the button “1” to activate the programming function.
- Type in your new password (maximum 6 digits) followed by “ENTER”. The keypad emits 3 beeps.
- To confirm, type in again your new password followed by “ENTER”.

RESET OF THE ENTIRE KEYPAD

By performing this procedure, the keypad goes back to factory settings and all its data will be erased.

- Remove the battery and wait 10sec. Insert again the battery and wait the keypad to initialise.
- Type in the code “1234567890” followed by “ENTER”.
- The buzzer activates intermittently.