

Centsys Wireless Keypad



Setting Up Password:

- Press *1234* to Enter Programming Mode
- Then press 0# to select KwikLearn
- Press 1# to select Address 1
(You can select Address from 1 to 999; Address 0 is the master code)
- Key in your password followed by #

Your password is now usable.

Pairing motor with the keypad:

- Select Remote Controls (TX) on your control board
- Select Add Remote
- Select Function: Trigger Gate
- When you see the screen that says "Press Remote Button", key in your password followed by # on your keypad

Your keypad is now paired with your motor.