



### 3G/4G GSM Wireless Single Station

Setting up hardware:

For BFT Motors, a converter (FK784) is required.

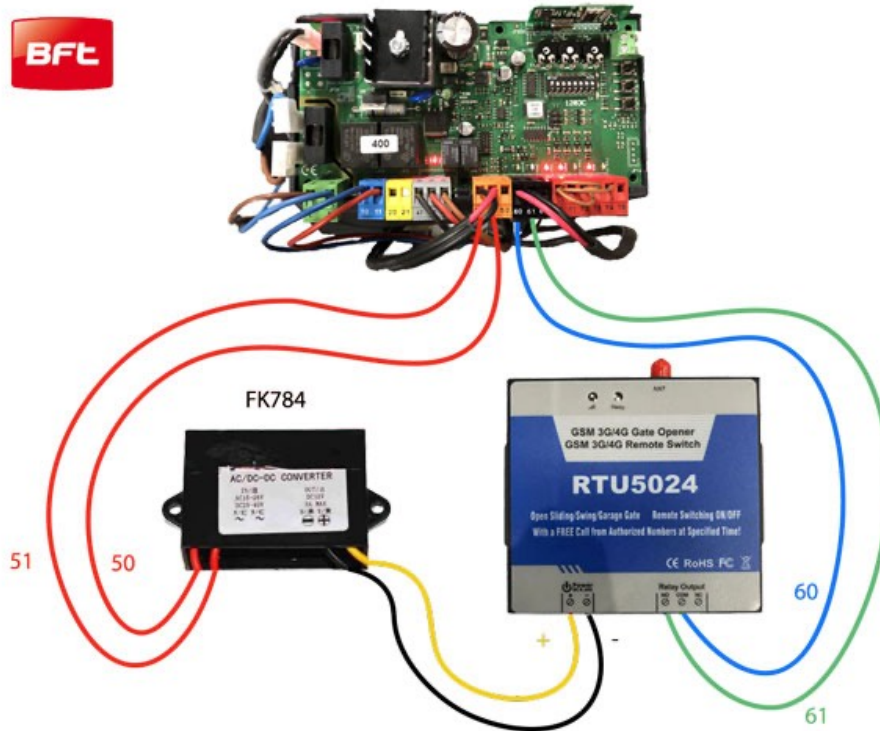

For Centsys Motors, GSM Unit can be wired directly to the control board.

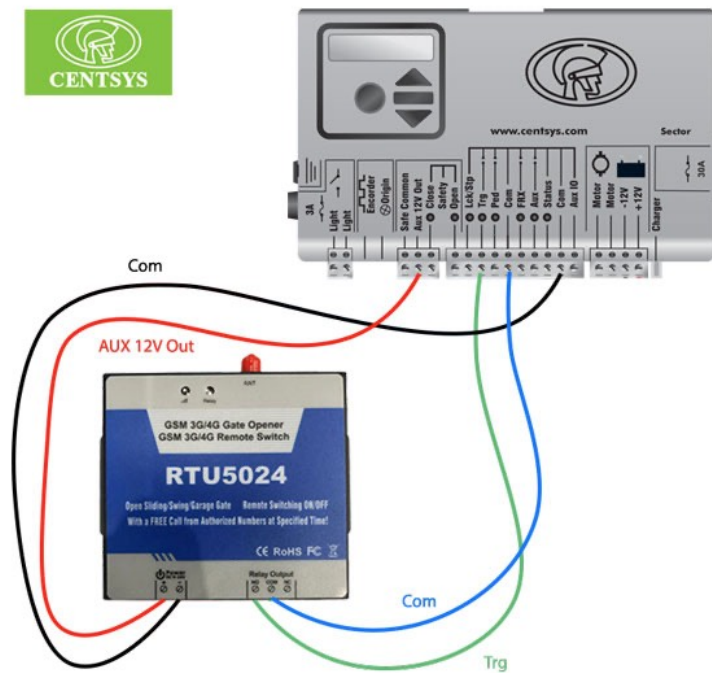

Setting up software:

### Step 1: Application



Download the App from Google Play Store or iOS App Store

Search for: **RTU5024**




### Step 2: Add your GSM Unit

- Tap “Add A New Access Device”
- Name your device in Access Control Name box.
- Fill Access Control No. with the number of the sim card (full size) in the GSM Unit.
- Access Control Password is 1234 unless you have changed it to your own.

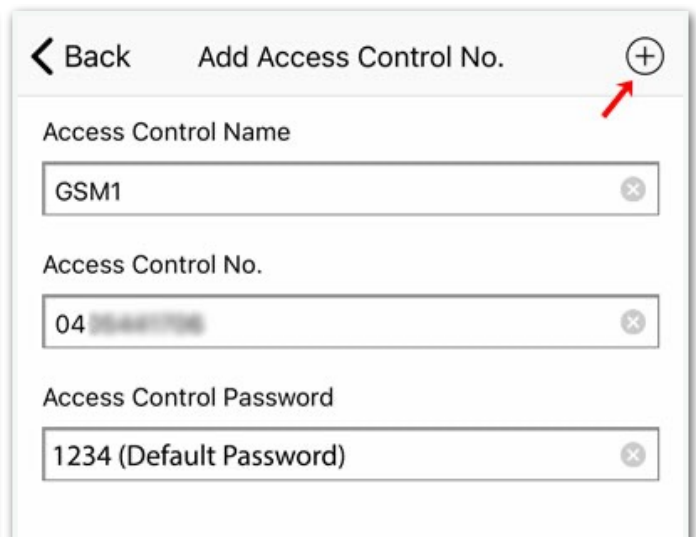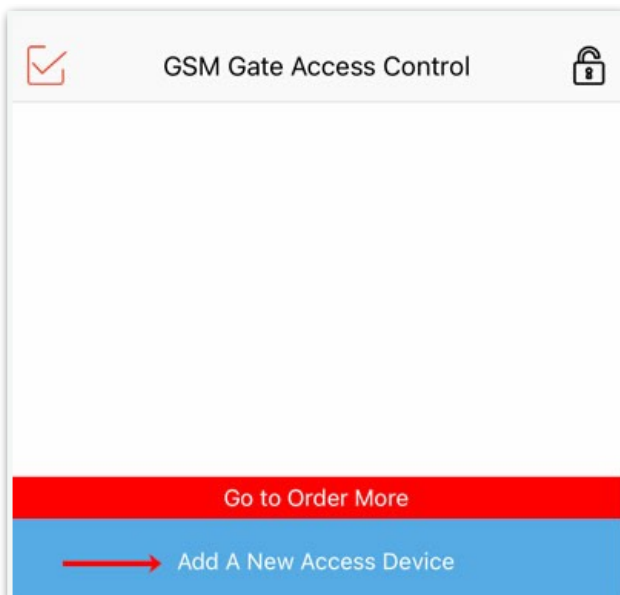


Press the plus sign at the top right corner to add your device and you should see it on the screen.

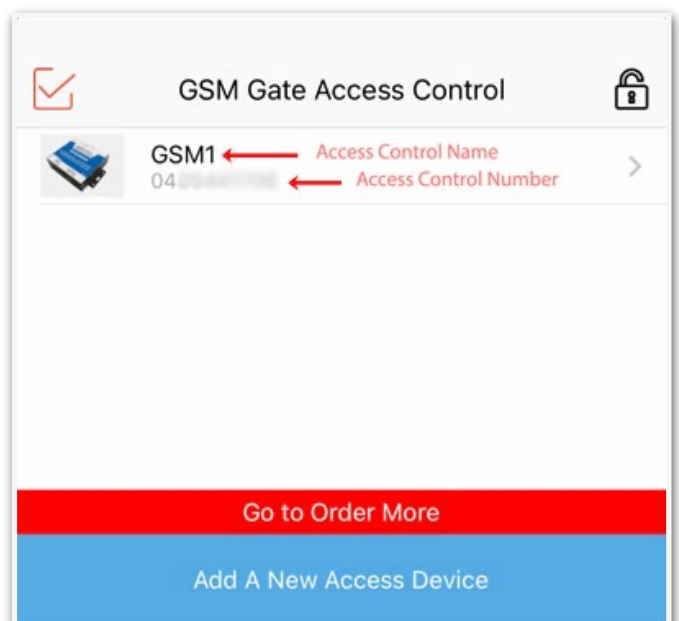

### Step 3: Add authorised numbers

Tap the gear icon at the top right corner then tap Add authorised number

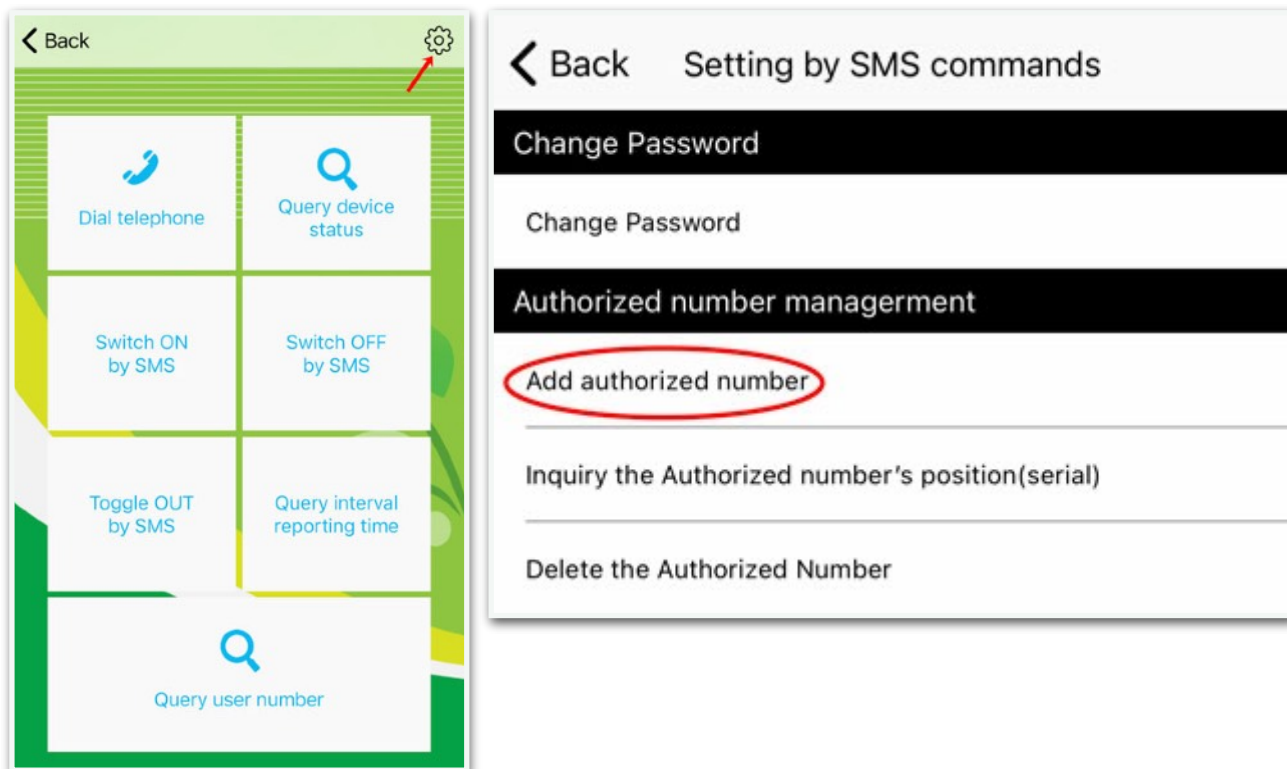


Fill in the Serial Number starting from 001 to 999.

Authorised Number is for your phone number(s).

Toggle Always Control to always have access to the GSM Unit otherwise you can set date and time that the number will have access to the unit. Then tap Confirm.

The image shows a screenshot of the 'Add Authorized Number' form. The form has a white background with a black header containing a 'Back' button and the title 'Add Authorized Number'. There are three input fields: 'Serial Number' with the value '001', 'Authorized Number' with the value '0451555555', and 'Always Control' which is a toggle switch currently turned on. At the bottom of the form is a black button labeled 'Confirm'.

#### Step 4: Sending command to GSM Unit

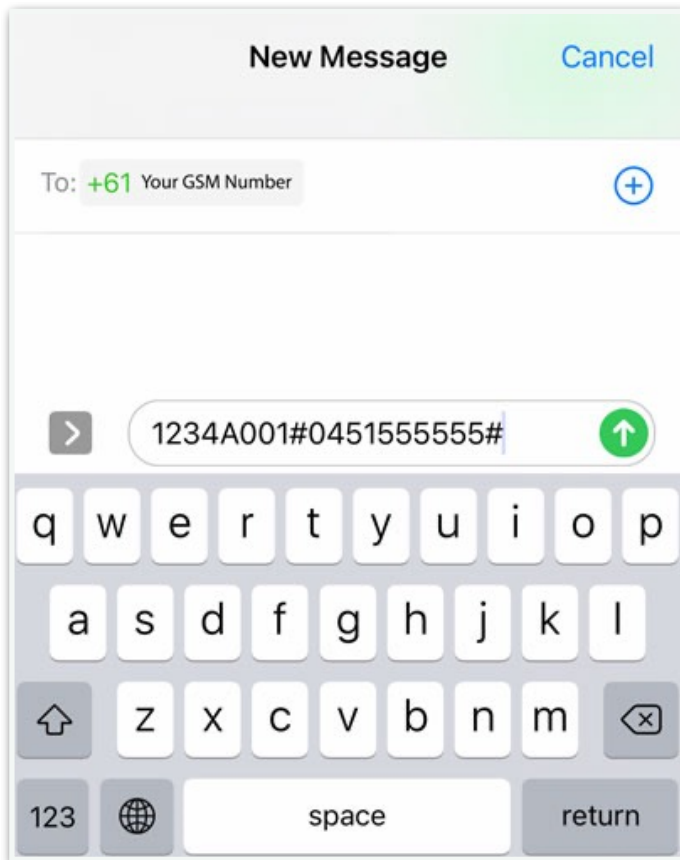


Command code will be automatically generated by the App.

The photo shows the command that adds 0451555555 as an authorised number at sequence no.1

Press send to activate the command.

#### Step 5: Confirmation

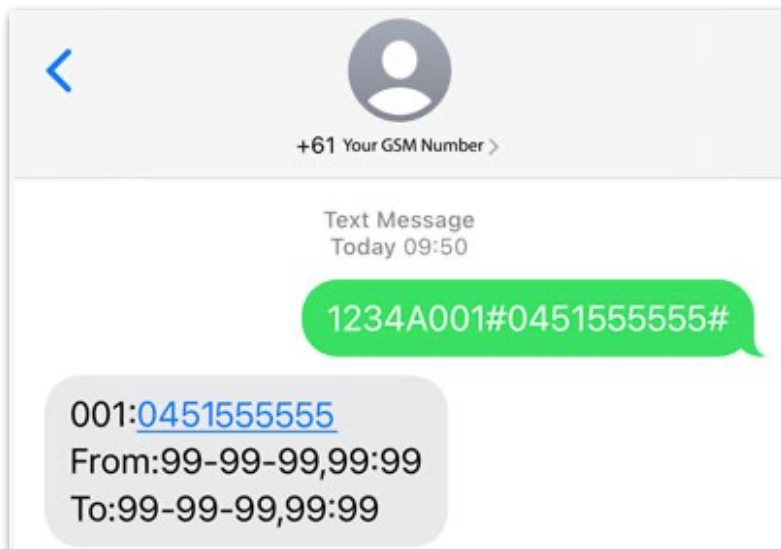

The unit will return a confirmation SMS.

Your number is authorised to call the unit.