

How to install Centsys Vantage?

Step 1: Mount the bottom end of the motor to the post with the large bracket and base plate.

Step 2: Setting the Closed Limit Switch - Fully extended arm

- Use the given key to turn motor to manual mode
- Push the gate to your desired closed position
- Fully extend the arm along the width of your gate.
- Retract (turn clockwise) it by 1 turn.
- Mark the location and mount the smaller bracket
- Slot in the collar bracket (for the next step)
- Slot the motor arm in and secure it with the given pin



Step 3: Setting the Open Limit Switch - Collar bracket

- Push the gate to your desired open position
- Position the collar right next to the black cover on the motor
- This will stop the arm from retracting any further, stopping the gate from opening beyond your desired opening position
- Tighten the collar with an Allen key to secure the position

